


TBR21 A.4.7.5 Resistance to earth

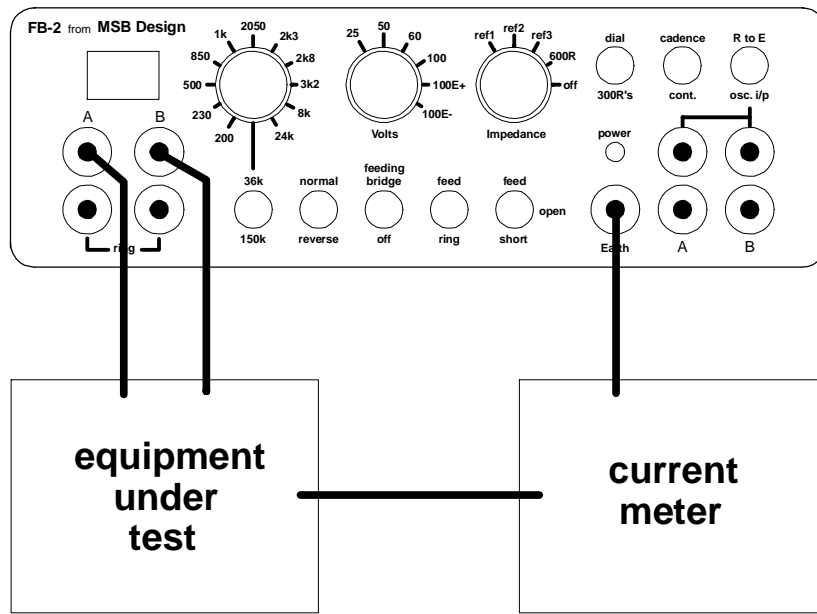

Settings :-

Feed resistance	= 230 ohms	Voltage	= 100E+/-
Impedance	= off	Dial / 300R's	= off
Dial cadence	= X	R to E / osc i/p	= X
Feed / open / short	= feed	Normal / reverse	= as needed
Ring / feed	= feed	Feeding Bridge	= on

X means "don't care"

The apparatus under test (AUT) is plugged into the FB-2, and the controls are set as shown.

Measure the earth current as required.